



3-STEPS INSTALLATION

Renew Old Bathroom Tiles with Our Cutting-Edge Coating Solution



Plan your work flow and installation steps by following thoroughly the following instructions and additional information from our website. It is possible to finish installation in a single day and start enjoying your masterpiece the following day– proper planning is key!

30 minutes
Surface Prep

1 hour
Base Coat + Flakes

4-6 hours
Curing time


30 minutes
Clear coat

Overnight
curing

**Start using the
following day!**


STEP . 01 PLAN & SURFACE PREP

A Good surface prep is the foundation to achieving a long-lasting ALLEGAN-TILE application. Properly preparing the surface before painting ensures that the coatings adheres well.

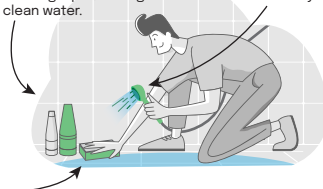- A. First, wet the surface to be painted with a light mixture of washing liquid/detergent and clean water.
- B. Use the sanding block provided to sand along tile grouts and existing tile or surfaces to remove accumulated dirt, dust, soap scum and etc.
- C. Rinse with clean water to a squeaky clean surface and let dry.
- 

STEP . 02 BASE COAT + FLAKES *for Classic 660 only

This will be your first attempt using the paint from our kit. Follow our guide to ensure a flawless finish.

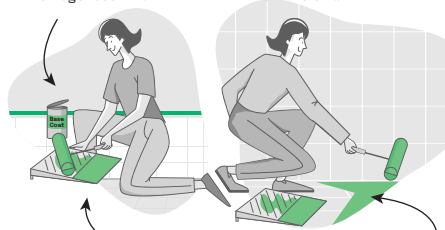- A. Shake the can of Base Coat for 5 seconds to ensure homogenous mix.
- B. Empty entire can of base coat into the tray provided.
- C. Using the roller, start painting from the furthest corner away from the exit.
- D. Use long strokes in a W pattern for ample coverage.
- 



3-STEPS INSTALLATION

Renew Old Bathroom Tiles with Our Cutting-Edge Coating Solution



STEP . 02


FLAKES INSTALLATION *for Classic 660 only

This will be your first attempt using the paint from our kit. Follow our guide to ensure a flawless finish.

- E. When you are half-way, pause to install the ALLEGAN Flakes component on top of the Base Coat surface.

- F. Sprinkle the flakes manually by hand in a spraying motion.

QR code here to link to video on website.

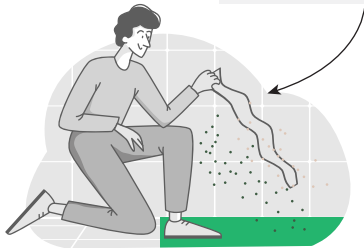

- G. Repeat above steps to finish the second half of area.
- H. When done, leave paint to dry for at least 4 hours (up to 6 hours depending on room conditions).


STEP . 03

CLEAR COAT

A final step to provide a wearing and protective layer over earlier base coat and flakes (for Classic 660 only). Additionally, it enhances the surface with a clean and brand new glossy finish.

- A. Vacuum off excess flakes and other contaminants on the surface. Ensure no foreign material are on the surface, otherwise, the final clear coat will permanently seal these onto the surface.

- B. Shake the can of clear coat for 5 seconds to ensure homogenous mix. Pour a line of clear coat along the furthest corner of the room.

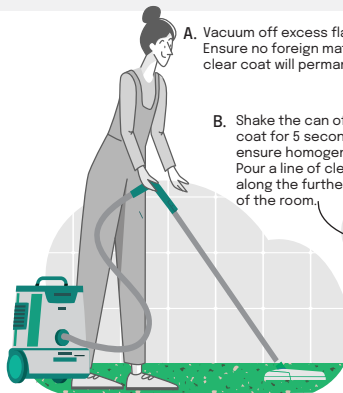

- C. Using the second roller provided, Start painting the clear coat in a long stroke and W pattern to ensure all are as are covered. Work your way towards the exit before wrapping up your work.



Allow clear coat to dry overnight before using the floor or painted surface.